SONY

2-320-497-**11** (1)

Trinitron Color TV

Operating Instructions **GB**

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 **CT**

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

FD Trinitron
WEGA

KV-SW34
KV-SW29
KV-SW25

M61
M50

© 2004 Sony Corporation

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

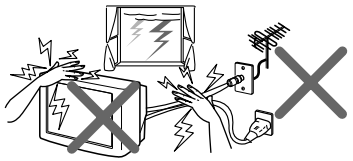

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

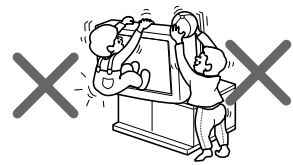

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

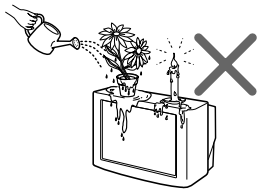

Do not place any objects on the TV. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

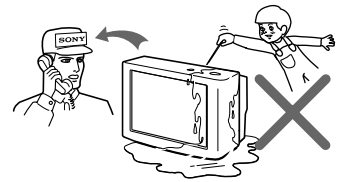

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

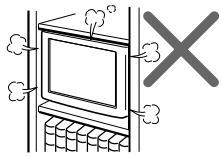

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

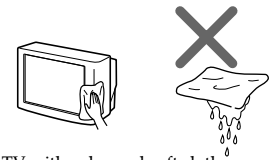

Clean the TV with a dry and soft cloth.
Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

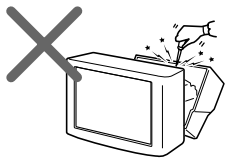

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

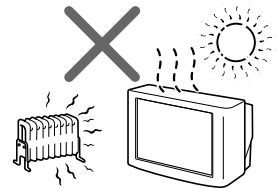

Your TV is recommended for home use only.
Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

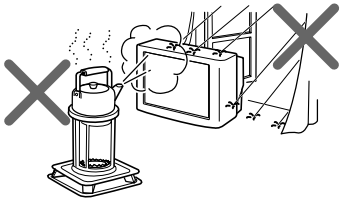

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

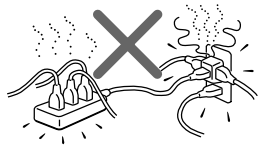

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

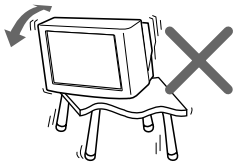

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

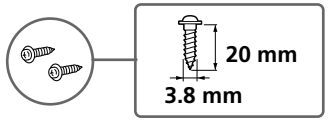

screws

clamps



band

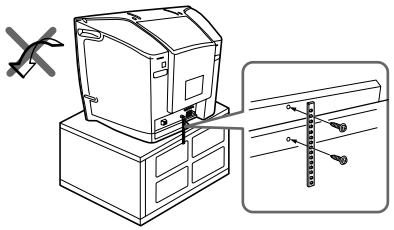

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

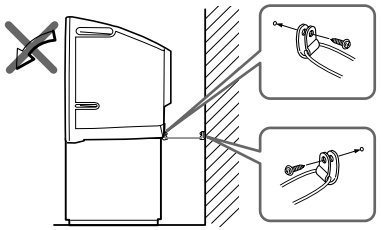

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

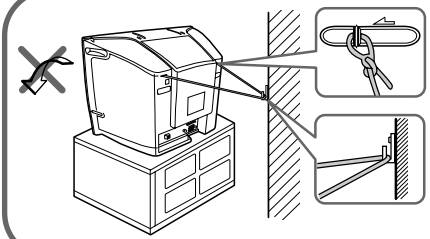

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**

Setting up your TV ("Initial Setup") **7**

Overview of Controls

TV front and rear panels **9**

Using the remote control and basic functions **10**

Advanced Operations

Selecting the picture and sound modes **12**

Enjoying stereo or bilingual programs (KV-SW34M61/SW29M61/SW25M61 only) **13**

Viewing Teletext (KV-SW34M61/SW29M61/SW25M61 only) **14**

Menu Adjustment

Introducing the menu system **15**

Changing the "Picture" setting **18**

Changing the "Sound" setting **19**

Changing the "Channel Setup" setting **21**

Changing the "Setup" setting **23**

Additional Information

Connecting optional components ... **24**

Troubleshooting **26**

Specifications ..... **Back cover**

GB

■ Getting Started

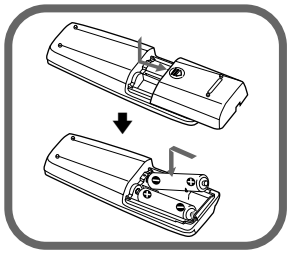

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

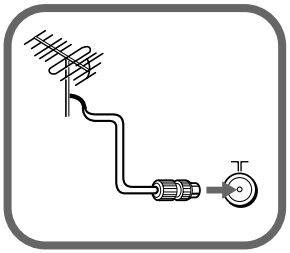

Step 2

Connect the antenna cable (not supplied) to ⅂⌐ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 24).

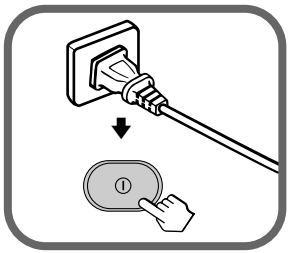

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

Note

- The ⏻ (standby) indicator flashes green for a few seconds when turning on the TV. This does not indicate a malfunction.

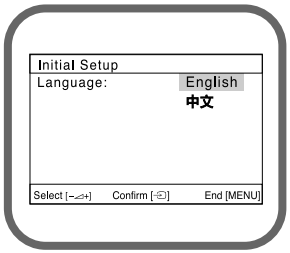

Step 4

Set up the TV by following the instructions of the “Initial Setup” menu (see page 7).

■ Setting up your TV ("Initial Setup")

When you turn on your TV for the first time, the "Initial Setup" menu will appear. You may change the menu language, preset the TV channels automatically, change the order of TV channels that appear on the screen and adjust the picture position using the buttons on the TV front panel.

Tip

- The MENU, ⊕ and ↑/↓/←/→ buttons on the remote control can also be used for the operations below.

1 Press ◿ +/– to select the desired menu language, then press ⊖.

The selected menu language appears.

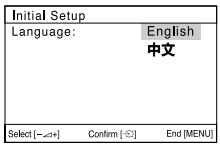

2 Press ◿ +/– to select "Yes", then press ⊖ to preset the channels automatically.

The screen will indicate automatic presetting is in progress.

After all available channels have been tuned and stored, the "Program Sorting" menu appears automatically on the screen.

To skip automatic channel presetting, select "No", then press ⊖.

If the message "No channel found. Please connect cable/antenna" appears, check your TV connections, then press ⊖.

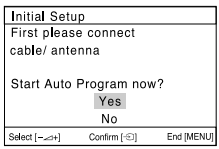

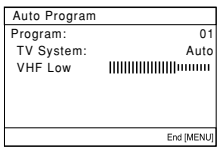

3 The "Program Sorting" menu enables you to change the order in which the channels appear on the screen.

a) If you wish to keep the channels in the tuned order, press MENU.

b) If you wish to store the channels in a different order:

1) Press ◿+/– to select the program number with the channel you wish to rearrange, then press ⊖.

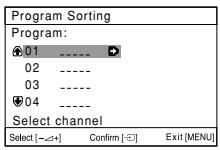

continue

The selected channel will appear on the screen.

2) Press ⊿+/– to select the new program number position for your selected channel, then press ⊕.

3) Repeat steps b) 1) and 2) if you wish to change the order of the other channels.

c) Press MENU to go to the next menu.

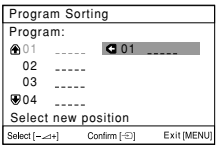

4 Press ⊿ +/– to adjust the bars on the top and bottom of the menu if they are slanted, then press ⊕.

"Picture V-Position" menu appears.

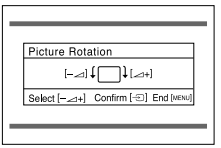

5 If the upper and lower bars are not equally positioned to the top and bottom of the screen, press ⊿ +/– to adjust them, then press ⊕.

If no adjustment is necessary, then press ⊕.

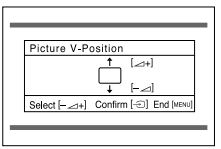

6 Press ⊿ +/– to select "No", then press ⊕. This menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "Yes", then press ⊕.

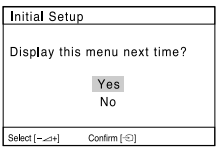

Tips

- You can immediately go to the end of the "Initial Setup" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 15).
- You can also preset the channels automatically by pressing MENU (AUTO PROG) button on the TV front panel for about five seconds.

■ TV front and rear panels

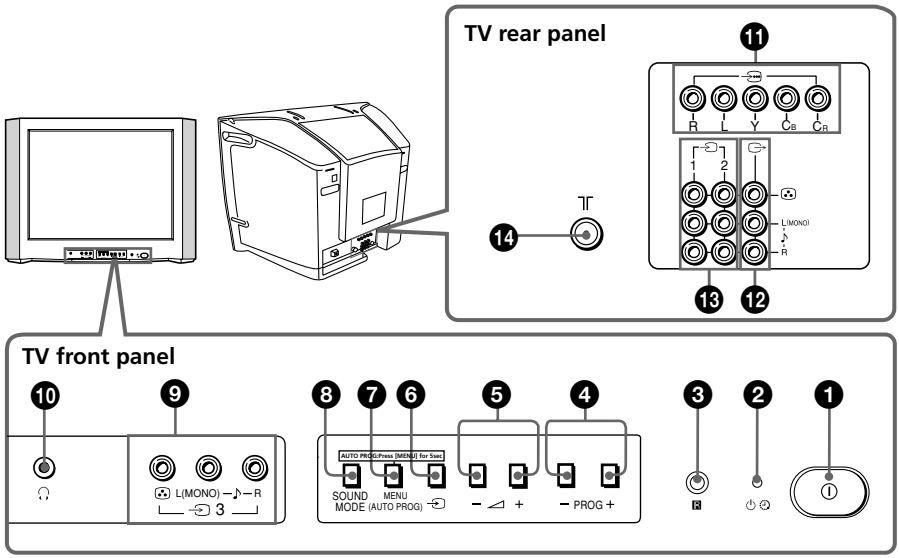

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷ ⏻	Standby indicator.	6
❷ 🕘	Wake Up indicator.	11
❸ R	Remote control sensor.	–
❹ PROG +/–	Select program number.	–
❺ ◿ +/–	Adjust volume.	–
❻ ⊡	Select TV or video input.	24
Menu operations		
❺ ◿ +/–	Select and adjust items.	–
❻ ⊡	Confirm selected items.	–
❼ MENU	Display or cancel the menu.	–
❼ (AUTO PROG)	Preset channels automatically.	8
❽ SOUND MODE	Select sound mode options. 5-Band Graphic Equalizer display will appear.	12
❾ ⊡3	Video input terminal 3.	24
❿ 🎧	Headphone jack.	–
⓫ ⊡	Component video input terminal.	25
⓬ ⊡	Monitor output terminal.	24
⓭ ⊡1, ⊡2	Video input terminal 1, 2.	24
⓮ ⊤	Antenna input terminal.	24

■ Using the remote control and basic functions

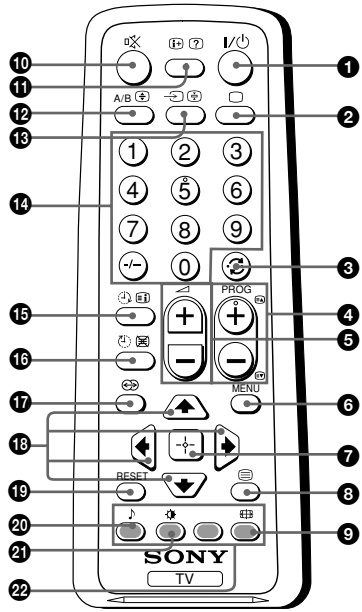

Button	Description	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❷ ▭	Display the TV program.	–
❸ ↻	Jump to last program number that has been watched for at least five seconds.	–
❹ PROG +/–	Select program number.	–
❺ ◿ +/–	Adjust volume.	–
❾ ▦	Change the picture size: “On” (16:9 wide-mode), “Off”.	–
❿ 🔇	Mute the sound.	–
⓫ ⓘ+	Display on-screen information.	–
⓭ ⏎	Select TV or video input.	24
⓮ 0 – 9, -/--	Input numbers.	–
⓱ ⊛	Select surround mode options: “On” (surround), “Simulated” (stereo-like monaural sound), “Off”.	–
⓳ RESET	Set TV to factory setting.	26

Button	Description	Page
⓴ ♪	Select sound mode options. 5-Band Graphic Equalizer display will appear.	12
㉑ ☼	Select picture mode options.	12
Menu operations		
❻ MENU	Display or cancel the menu.	17
❼ ⊕	Confirm selected items.	17
⓲ ↑, ↓, ←, →	Select and adjust items.	17
Timer operations		
⓯ ◴ (Wake Up Timer)	Set TV to turn on automatically according to the desired period of time (max. of 12 hours). The ◴ indicator on the TV lights up amber once you set the wake up timer. If no buttons or controls are pressed for more than one hour after the TV is turned on using the wake up timer, the TV automatically goes into standby mode.	–
⓰ ◴ (Sleep Timer)	Set TV to turn off automatically according to the desired period of time (max. of one hour and 30 min).	–
Teletext operations (green label) (KV-SW34M61/SW29M61/SW25M61 only)		
❹ ▲, ▼	Display the next or previous page.	14
❽ ☰	Display Teletext broadcast.	14
⓫ ?	Reveal concealed information.	14
⓬ ⇳	Enlarge the Teletext display.	14
⓭ ⇳	Stop Teletext display from scrolling.	14
⓯ ☰	Display Teletext service contents.	14
⓰ ☒	Show TV screen while waiting for Teletext page.	14
㉒ ● (red, green, yellow, blue)	Access a FASTEXT menu.	14
Stereo/bilingual operations (KV-SW34M61/SW29M61/SW25M61 only)		
⓬ A/B	Select stereo/bilingual mode.	13

■ Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the "Personal" option.

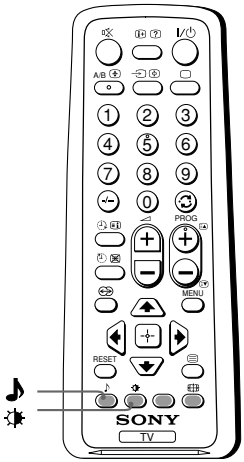

Selecting the picture mode

Press ☼ to select the desired picture mode.

Select	To view
"Dynamic"	high contrast pictures.
"Standard"	normal pictures.
"Soft"	mild pictures.
"Personal"	the last adjusted picture setting from the "Picture Adjustment" option in the menu (see page 18).

Selecting the sound mode

Press ♪ (or SOUND MODE on the front panel) to select the desired sound mode.

5-Band Graphic Equalizer display will appear.

Select		To listen to
"Dynamic"		dynamic and clear sound that emphasizes both the low and high tones.
"Drama"		sound that emphasizes voice and high tones.
"Soft"		soft, natural and relaxing sounds.
"Personal"		the last adjusted sound setting from the "Sound Adjustment" option in the menu (see page 20).

■ Enjoying stereo or bilingual programs

▶ KV-SW34M61/SW29M61/SW25M61 only

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

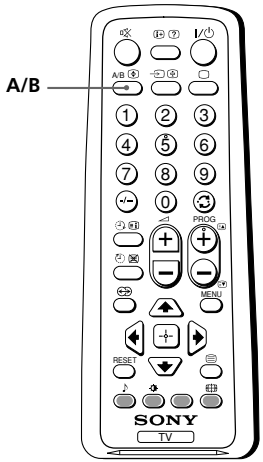

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → Mono (Regular sound)
NICAM bilingual	NICAM Main (Main sound) → NICAM Sub (Sub sound) → Mono (Regular sound)
NICAM monaural	NICAM Main (Main sound) → Mono (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	Stereo (Stereo sound) → Mono (Regular sound)
A2 bilingual	Main (Main sound) → Sub (Sub sound)

Note

- If the stereo sound is noisy when receiving a stereo program, select "Mono". The sound becomes monaural but the noise is reduced.

■ Viewing Teletext

▶ KV-SW34M61/SW29M61/SW25M61 only

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

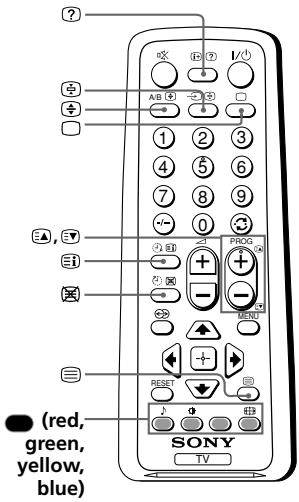

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ☰i. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press ☰▲ or ☰▼.
hold (pause) a Teletext display	Press ⊜ to display the symbol "⊜" at the top left corner of the screen. To resume normal Teletext viewing, press ⊜.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⇳. Each time you press ⇳, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	(1) Enter the Teletext page number that you want to refer to, then press ⊠. (2) When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ● (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▢.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

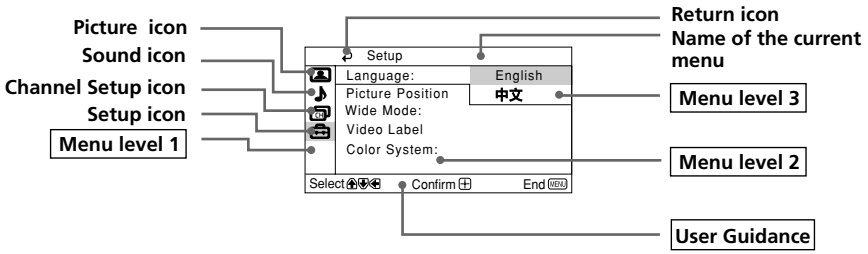

Level 1	Level 2	Level 3/Function	Page
"Picture"	"Mode"	Select the picture mode: "Dynamic" → "Standard" → "Soft" → "Personal"	18
	"Picture Adjustment"	Adjust the "Personal" option: "Picture" → "Brightness" → "Color" → "Hue" → "Sharpness" → "Reset"	
	"Color Temperature"	Adjust white color tint: "Cool" → "Neutral" → "Warm"	
	"Intelligent Picture"	Optimize picture quality: "On" → "Off"	
"Sound"	"Mode"	Select the sound mode: "Dynamic" → "Drama" → "Soft" → "Personal"	19
	"Sound Adjustment"	Adjust sound frequency settings of "Personal" option: "Adjust" → "Reset"	
	"Balance"	Select to emphasize the left and right speakers.	
	"Intelligent Volume"	Adjust volume automatically: "On" → "Off"	
	"Surround"	Select the surround mode: "On" → "Simulated" → "Off"	

continue

continued

Level 1	Level 2	Level 3/Function	Page
"Channel Setup"	"Auto Program"	Preset channels automatically.	21
	"Manual Program"	Preset channels manually.	
	"Program Label"	Label the program number.	
	"Program Block"	Block unwanted programs.	
	"Program Sorting"	Change the order in which the channels appear on the screen.	
"Setup"	"Language"	Change the menu language: "English" → "中文" (Chinese)	23
	"Picture Position"	Adjust the picture position.	
	"Wide Mode"	Change the picture size: "On" (16:9 wide-mode) → "Off"	
	"Video Label"	Label the connected equipment.	
	"Color System"	Select the color system: "Auto" → "PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	

How to use the menu

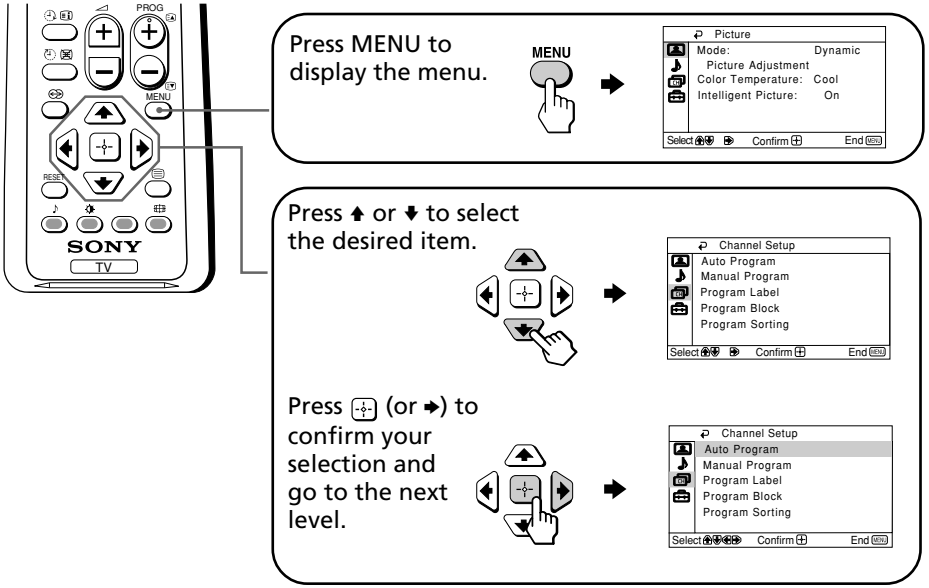

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (↩) is highlighted, then press ⊕.
- The MENU, ⊖ and ◿ +/– buttons on the TV front panel can also be used for the operations above (see page 9).

Note

- When a feature is dimmed in the menu, it is not selectable.

■ Changing the “Picture” setting

The “Picture” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “Picture” icon ( ) is selected, then press ⊕.

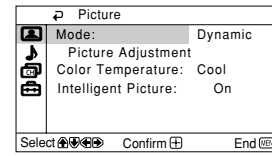

3 Press ↑ or ↓ to select the desired item (e.g., “Mode”), then press ⊕.

Select	To
“Mode”	choose either “Dynamic”, “Standard”, “Soft” or “Personal”* (see page 12).
“Color Temperature”	adjust white color tint. Choose either “Cool” (blue tint), “Neutral” (neutral tint) or “Warm” (red tint).
“Intelligent Picture”	optimize picture quality. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.

* You can adjust the setting to your personal preference in the “Picture Adjustment” and “Color Temperature” options only when the “Personal” mode is selected.

Adjusting the “Picture Adjustment” items under “Personal” mode

1 Press ↑ or ↓ to select either “Picture” (contrast), “Brightness”, “Color”, “Hue” (color tones) or “Sharpness”, then press ⊕.

Selecting “Reset” will set your TV to the factory setting.

2 Press ↑,↓,← or → to adjust the setting of your selected item, then press ⊕.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “Personal”.

Notes

- “Hue” can be adjusted for the NTSC color system only.
- Reducing “Sharpness” can also reduce picture noise.

■ Changing the “Sound” setting

The “Sound” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “Sound” icon (♪), then press ⊕.

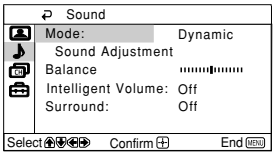

3 Press ↑ or ↓ to select the desired item (e.g., “Mode”), then press ⊕.

Select	To
“Mode”	choose either “Dynamic”, “Drama”, “Soft” or “Personal”* (see page 12).
“Balance”	Press ↓ or ← to emphasize the left speaker. Press ↑ or → to emphasize the right speaker.
“Intelligent Volume”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.
“Surround”	choose either “On”, “Simulated” or “Off” (see page 10).

* You can adjust the setting to your personal preference in the “Sound Adjustment” option only when the “Personal” mode is selected (see page 20).

continue

continued

Adjusting the “Sound Adjustment” item under “Personal” mode

The 5-Band Graphic Equalizer feature allows you to adjust sound frequency settings of “Personal” mode in the menu.

1 Make sure that “Adjust” is selected, then press ⊕.

Selecting “Reset” will set your TV to the factory setting.

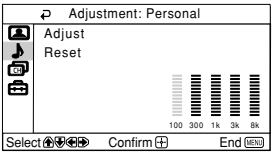

2 Press ← or → to select the desired sound frequency, then press ↑ or ↓ to adjust the setting and press ⊕.

The adjusted settings will be received when you select “Personal”.

Notes

- Adjusting higher frequency will affect higher pitched sound and adjusting lower frequency will affect lower pitched sound.
- You may display the settings directly using the SOUND MODE button on the TV front panel (see page 9) or ♪ button on the remote control (see page 11).

■ Changing the "Channel Setup" setting

The "Channel Setup" menu allows you to preset channels automatically, manually preset channels, label the program number, block unwanted programs and change the order of TV channels that appear on the screen.

1 Press MENU.

2 Press ↑ or ↓ to select the "Channel Setup" icon (CH), then press ⊕.

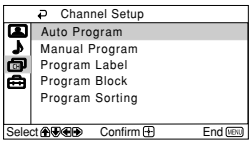

3 Press ↑ or ↓ to select the desired item (e.g., "Auto Program"), then press ⊕.

Select	To
"Auto Program"	preset channels automatically.
"Manual Program"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 22).
"Program Label"	label the program number. (1) Select "Program" and press ⊕. Press ↑ or ↓ to select the program number, then press ⊕. (2) Select "Label" and press ⊕. Press ↑ or ↓ to select alphanumeric characters for the label, then press ⊕.
"Program Block"	block unwanted programs. (1) Select "Program" and press ⊕. Press ↑ or ↓ to select the program number, then press ⊕. (2) Select "Block" and press ⊕, then press ↑ or ↓ to choose either "On" or "Off". If you preset a blocked program number, that program number will be unblocked automatically.
"Program Sorting"	change the order in which the channels appear on the screen (see step 3 b) of the section "Initial Setup" in page 7).

Notes

- You may label the program numbers so that you can see the program labels in the "Program Sorting" menu.
- If you sort a blocked program, that program will remain blocked.

continue

continued

Presetting channels manually

1 After selecting "Manual Program", select the program number to which you want to preset a channel.

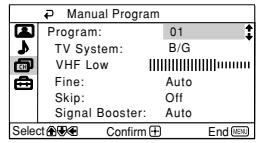

(1) Make sure "Program" is selected, then press ⊕.

(2) Press ↑ or ↓ until the program number you want to preset appears on the menu, then press ⊕.

2 Select the desired channel.

(1) Make sure either "VHF Low", "VHF High" or "UHF" is selected, then press ⊕.

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ⊕.

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV System", then press ⊕.

(2) Press ↑ or ↓ until the sound becomes normal, then press ⊕.

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "Fine" tuning feature.

(1) Press ↑ or ↓ to select "Fine", then press ⊕.

(2) Press ↑ or ↓ to select "Manual", then press ⊕.

(3) Press ↑,↓,← or → until the picture and sound quality are optimal, then press ⊕.

The + or – icon on the menu flashes while tuning.

5 If you want to skip this program number when using PROG +/– , you can select the "Skip" feature.

(1) Press ↑ or ↓ to select "Skip", then press ⊕.

(2) Press ↑ or ↓ to select "On", then press ⊕.

To cancel, select "Off", then press ⊕.

6 If the TV signal is too strong (picture distorted; picture with lines; signal interference) or weak (snowy picture), you may be able to improve the picture quality by setting the "Signal Booster" feature.

(1) Press ↑ or ↓ to select "Signal Booster", then press ⊕.

(2) Press ↑ or ↓ to select either "Off" (for picture distorted; picture with lines; signal interference) or "Auto" (for snowy picture), then press ⊕.

■ Changing the “Setup” setting

The “Setup” menu allows you to change the menu language, adjust the picture position, change the picture size, label the connected equipment and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “Setup” icon (🧰), then press ⊕.

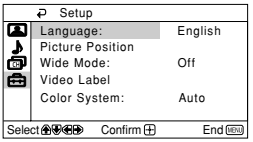

3 Press ↑ or ↓ to select the desired item (e.g., “Language”), then press ⊕.

Select	To
“Language”	change the menu language. Press ↑ or ↓ to select either “English” or “中文” (Chinese), then press ⊕.
“Picture Position”	adjust the picture position when it is not aligned with the TV screen. Press ↑ or ↓ to select “Picture Rotation” or “Picture V-Position”, then press ⊕. Press ↑, ↓, ← or → to adjust the picture position, then press ⊕.
“Wide Mode”	choose either “On” or “Off” (see page 10).
“Video Label”	label the connected equipment. (1) Select “Video Input” and press ⊕. Press ↑ or ↓ to select the input you want to label, then press ⊕. (2) Select “Label” and press ⊕, then press ↑ or ↓ to select the label options: ”Video 1/Video 2/Video 3/DVD”, “VCR”, “SAT”, “Game” or “Edit”*. * You may edit the video label. Press ↑ or ↓ to select alphanumeric characters for the label, then press ⊕.
“Color System”	select the color system. Press ↑ or ↓ to select either “Auto”, “PAL”, “SECAM”, “NTSC3.58” or “NTSC4.43”, then press ⊕. Normally, set this to “Auto”.

■ Connecting optional components

Connecting to the video input terminal ( )

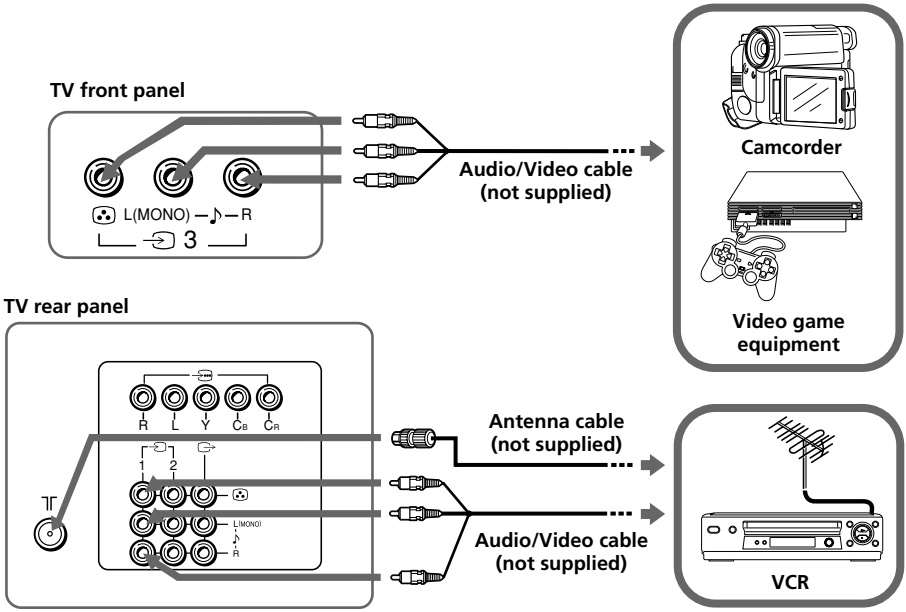

Note

- If you connect a VCR to ⊤ (antenna input), preset the signal output from the VCR to the program number 0 on the TV (see page 22).

Connecting to the monitor output terminal ( )

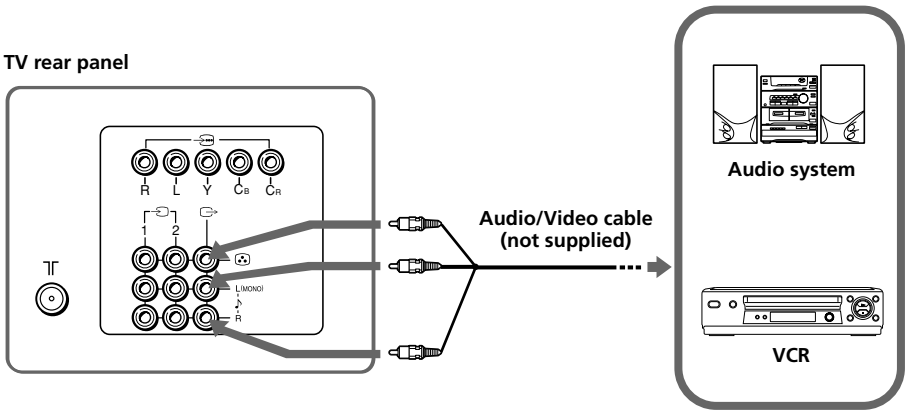

Connecting to the component video input terminal ( )

TV rear panel

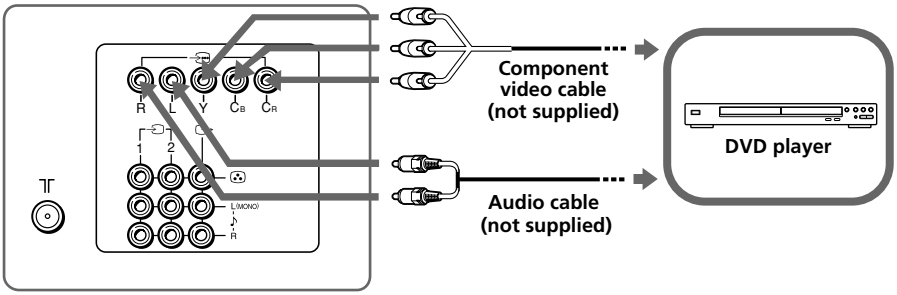

Notes

- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C_B (blue)	C_B, P_B, C_b or B-Y
C_R (red)	C_R, P_R, C_r or R-Y

- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Troubleshooting

If you find any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

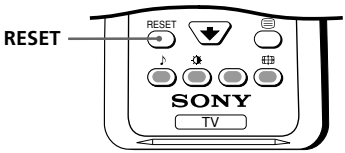

Reset function

Press the RESET button on your remote control. Your TV will go blank for a few seconds then the "Initial Setup" menu will appear.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	24
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "Channel Setup" menu and select "Manual Program" to preset the channel again.	22
	• Signal transmission is low.	• Display the "Channel Setup" menu and set the "Signal Booster" to "Auto" from "Manual Program".	22
		• Try using an external booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Turn off or disconnect the external booster if it is in use.	–
		• Display the "Channel Setup" menu and set the "Signal Booster" to "Off" from "Manual Program".	22
Good picture **Noisy sound**	• The TV system setting is inappropriate.	• Display the "Channel Setup" menu and select the appropriate "TV System" from "Manual Program".	22

Symptom	Possible cause	Solutions	Page
No picture  **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	24
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	10 9
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	10
	• The sound is muted.	• Press 🔇 to cancel the muting.	10
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("Fine") function.	– 22
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of an external booster is inappropriate.	• Turn off or disconnect the external booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "Picture" menu and select "Personal" of "Mode", then adjust the "Color" level in "Picture Adjustment".	18
	• The color system setting is inappropriate.	• Display the "Setup" menu and check the "Color System" setting (usually set this to "Auto").	23
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

continue

continued

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "Picture Position" under "Setup" menu, then adjust "Picture Rotation" and "Picture V-Position" so that the picture is aligned to the TV screen.	– 23
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	24
or **Stereo broadcast sound switches on and off or is distorted (KV-SW34M61/ SW29M61/ SW25M61 only).**	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
"100" appears at the top of the screen and there is no Teletext display (KV-SW34M61/ SW29M61/ SW25M61 only).	• The channel carries no Teletext broadcast.	—	14
Teletext display is incomplete (snowy picture or double images) (KV-SW34M61/ SW29M61/ SW25M61 only).	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	24
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Display the "Channel Setup" menu and set the "Signal Booster" to "Auto" from "Manual Program". • Try using an external booster. • Use the fine tuning ("Fine") function.	22 – 22

Symptom	Possible cause	Solutions	Page
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
The TV screen sometimes goes blank for slightly longer than usual during channel change.	• The "Signal Booster" is functioning to detect a weak signal. This does not indicate a malfunction.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

警告

- 本電視機內存在危險性高電壓。
- 本電視機僅可在 110-240 伏特交流電壓下操作。
- 若未完成所有連接程序，請勿插入電源線；否則極少量的電流可能經天線或其它端子外泄。
- 若打算近期內不使用遙控器，請將電池取出，以避免電池泄漏而損壞遙控器。若您不小心觸及電池所泄漏的液體，應立即用水洗淨。

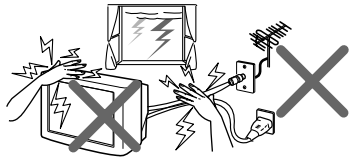

爲了個人安全起見，雷雨期間，請勿觸摸電視機的任何部份，包括電源線和天線電纜。

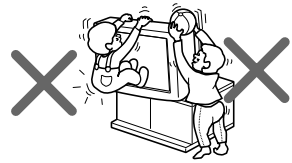

爲了兒童安全起見，請勿讓他們獨自逗留在電視機旁。千萬別讓兒童攀爬本電視機。

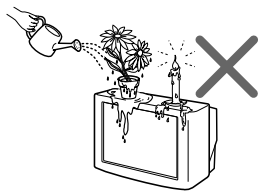

請勿放置任何物體於電視機上。請勿使任何液體滴濕或噴濕本電視機。請勿放置任何裝有液體的物體（如花瓶）於電視機上。

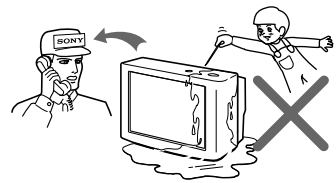

若有任何液體流入或固體落入本電視機內時，請勿操作本電視機。應立即請合格的專業人員檢查。

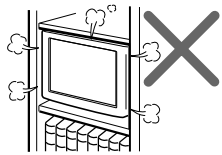

請勿堵塞本電視機的通風口。
請勿將本電視機放置於諸如書架或嵌入式壁櫥等封閉之處。

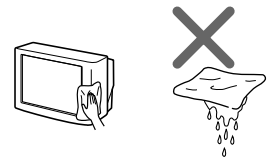

請用乾的軟布清潔本電視機。請勿使用汽油、稀釋劑或任何其它化學品清潔本電視機。請勿在電視機殼噴塗表面貼附任何物體（例如，貼紙，透明玻璃膠紙，膠合劑等）。請勿刮劃顯像管。

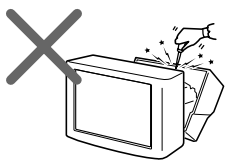

請勿打開本電視機的機殼和後蓋，因爲電視機內存在高電壓和危險性部件。須由合格的專業人員對電視機進行檢修或棄置。

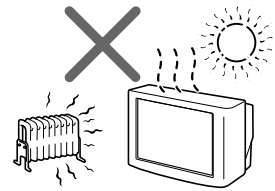

本電視機只適於家庭使用。請勿將本電視機放置於任何交通工具內或多塵、高溫、潮濕或震動頻繁之處。

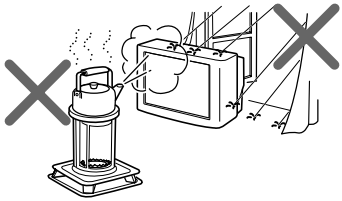

爲防止火災或觸電，請勿使本電視機被雨淋或受潮。

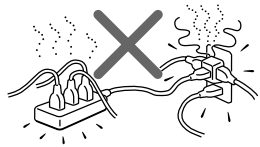

請勿在同一電源插座上插入太多的電器。請勿損壞電源線。

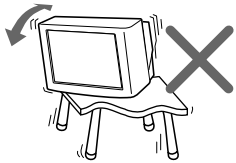

放置電視機於穩定的、並足以支撐電視機重量的電視支架及地面上。確保電視支架的表面平整且表面積寬於電視機底面。



捏住插頭將電源線拔開。請勿直接拉拔電源線。即使電視機已斷開電源，但只要電源線還在插座內，它仍接通至交流電源。若想移動本電視機或打算近期內不使用本電視機時，請將電源線拔開。

■ 固定電視機

爲防止電視機摔落，請使用所提供的螺絲、夾子和帶條以固定電視機。

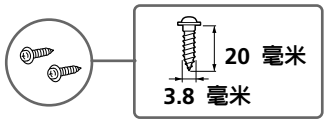

螺絲

夾子



帶條

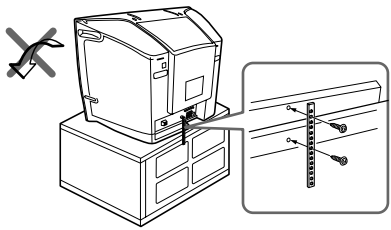

將帶條分別固定至電視機背後提供的螺絲孔及電視支架上。

或

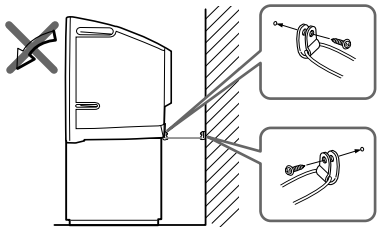

(1) 將一根繩索或鏈條穿過夾子。
(2) 將其中一個夾子固定至牆上或柱子上，而另一個夾子則固定至電視機背後提供的螺絲孔上。

或

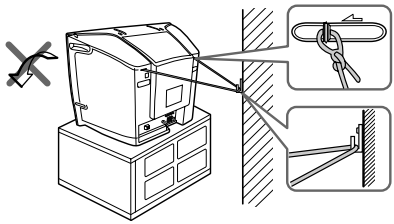

(1) 將繩索或鏈條的末端各別穿過電視機背後提供的柄上。
(2) 用可支撐電視機重量的連接物將繩索或鏈條固定至牆上或柱子上。

註

- 請僅使用提供的螺絲。使用其它螺絲可能會損壞本電視機。

目錄

設置您的電視機

準備工作 **6**
設定您的電視機（“初始化设定”） **7**

控制鍵總概況

電視機前面和背後的控制板 **9**
使用遙控器和基本功能 **10**

高級操作

選擇圖像和聲音模式 **12**
欣賞立體聲或雙語言節目（僅於 KV-SW34M61/SW29M61/SW25M61） **13**
收看圖文電視（僅於 KV-SW34M61/SW29M61/SW25M61） **14**

調整您的設定（MENU）

介紹菜單系統 **15**
調整“图像设定” **18**
調整“声音设定” **19**
調整“频道设定” **21**
調整“设定”菜單 **23**

附加信息

連接選購的裝置 **24**
故障檢修 **26**
規格 ..... **封底**

CT

■ 準備工作

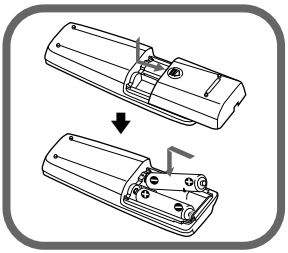

步驟 1

將所提供的電池裝入遙控器。

註

- 請勿使用舊電池或同時使用不同類型的電池。

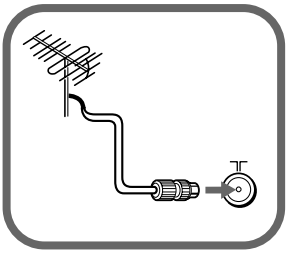

步驟 2

將天線電纜（未提供）連接至電視機背後的 ⅂⊢（天線輸入）端子。

提示

- 您也可將本電視機連接至其它選購的裝置（參考第 24 頁）。

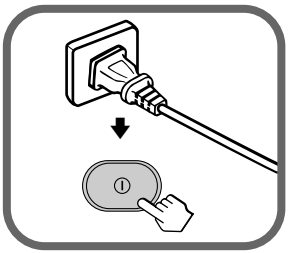

步驟 3

插入電源線，然後按壓電視機上的 ① 鍵以接通電視機的電源。

註

- 打開電視機時 ⏻（待機）指示燈將閃爍爲綠燈數秒鐘。這並不表示發生故障。

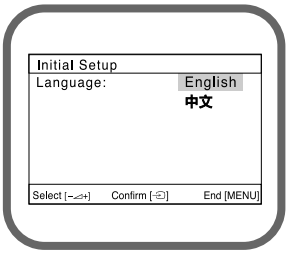

步驟 4

按照“Initial Setup”（“初始化设定”）菜單的指示以設定您的電視機（參考第 7 頁）。

■ 設定您的電視機（“初始化设定”）

當您第一次打開電視機時，“Initial Setup”（“初始化设定”）菜單將會顯示在屏幕上。
您可用電視機前面控制板上的按鍵以改變菜單語言，自動預設電視頻道，改變顯示在屏幕上的電視頻道順序和調整圖像位置。

提示

- 遙控器上的 MENU 鍵，⊕ 鍵和 ↑/↓/←/→ 鍵也可用於下述操作。

1 按壓 ◿ +/– 鍵以選擇所要的菜單語言，然後按壓 ⊖ 鍵。

被選擇的菜單語言將顯示在屏幕上。

2 按壓 ◿ +/– 鍵以選擇“是”，然後按壓 ⊖ 鍵以自動預設頻道。

屏幕將顯示自動預設頻道正在進行中。

當所有可接收的頻道已被調諧和儲存後，“頻道排序”菜單將會自動顯示在屏幕上。

若要略掉自動預設頻道，選擇“否”，然後按壓 ⊖ 鍵。

如果出現“无信号。请连接有线信号线或天线”的訊息，請檢查您的電視連接，然後按壓 ⊖ 鍵。

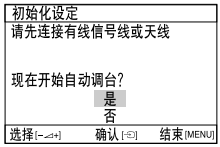

3 “频道排序”菜單可以讓您改變顯示在屏幕上的頻道順序。

a) 若您要保留已被調諧的頻道順序，按壓 MENU 鍵。

b) 若您要改變頻道的順序：

1) 按壓 ◿ +/– 鍵以選擇您要重新排序的頻道號碼，然後按壓 ⊖ 鍵。

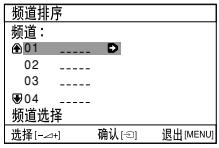

續

被選定的頻道將會顯示在屏幕上。

2) 按壓 ◿ +/– 鍵以選擇新的頻道位置，然後按壓 ⊖ 鍵。

3) 若您要改變其他頻道的順序，請重復 b) 1) 和 2) 的步驟。

c) 按壓 MENU 鍵以進入下個菜單。

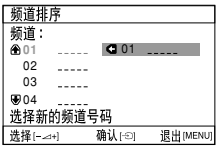

4 **若菜單頂部和底部的線條傾斜，按壓 ◿ +/– 鍵以作出調整，然後按壓 ⊖ 鍵。**

“图像垂直位置调节”菜單出現。

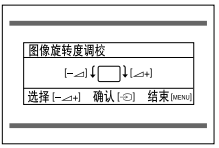

5 **若上下線條距離屏幕頂部和底部的位置不相等，按壓 ◿ +/– 鍵以作出調整，然後按壓 ⊖ 鍵。**

若不需作出調整，則按壓 ⊖ 鍵。

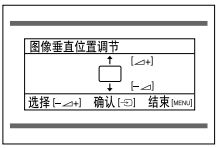

6 **按壓 ◿ +/– 鍵以選擇“否”，然後按壓 ⊖ 鍵。則當您再次按壓 ① 鍵打開電視機時，這菜單將不會再顯示在屏幕上。**

若要這菜單再次顯示在屏幕上，選擇“是”，然後按壓 ⊖ 鍵。

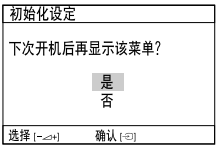

提示

- 您可按壓 MENU 鍵以進入“初始化设定”菜單最後的設定項目。
- 您也可使用菜單系統設置您的電視機（參考第 15 頁）。
- 您也可按壓電視機前面控制板的 MENU (AUTO PROG) 鍵約五秒以自動預設頻道。

■ 電視機前面和背後的控制板

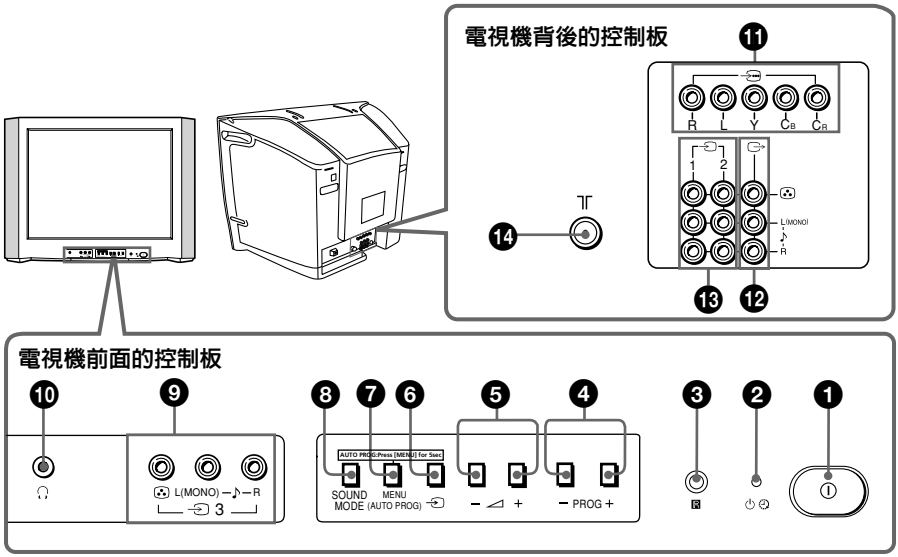

按鍵 / 端子	功能	頁面
❶ ⏻	打開或關閉電視機。	6
❷ ⏻	待機指示燈。	6
❷ 🕘	喚醒指示燈。	11
❸ R	遙控傳感器。	–
❹ PROG +/–	選擇頻道號碼。	–
❺ ◿ +/–	調整音量。	–
❻ ⊖	選擇電視或視頻輸入。	24
菜單操作		
❺ ◿ +/–	選擇和調整項目。	–
❻ ⊖	確認被選項目。	–
❼ MENU	顯示或取消菜單。	–
❼ (AUTO PROG)	自動預設頻道。	8
❽ SOUND MODE	選擇聲音模式選項。 “5-Band Graphic Equalizer” 顯示將出現在屏幕上。	12
❾ ⊖3	視頻輸入端子 3。	24
❿ 🎧	耳機插口。	–
⓫ ⊖	DVD 分量信號輸入端子。	25
⓬ ⊖	監視器輸出端子。	24
⓭ ⊖1, ⊖2	視頻輸入端子 1, 2。	24
⓮ ⊤	天線輸入端子。	24

■ 使用遙控器和基本功能

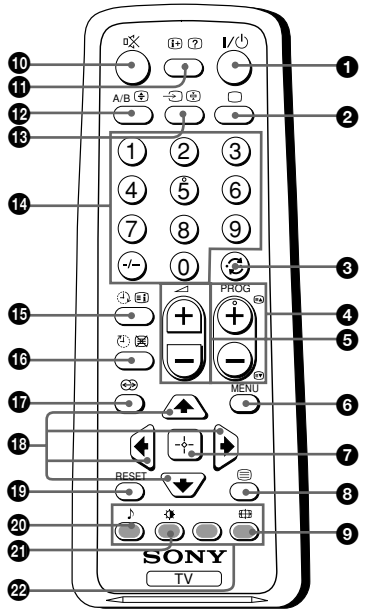

按鍵	說明	頁面
❶ I/⏻	打開或關閉電視機。	–
❷ ▢	顯示電視節目。	–
❸ ↺	跳回到之前收看至少五秒的頻道號碼。	–
❹ **PROG +/–**	選擇頻道號碼。	–
❺ ◿ **+/–**	調整音量。	–
❾ ▦	改變圖像尺寸： “开”（16:9 寬熒幕模式），“关”。	–
❿ 🔇	消除聲音。	–
⓫ ⓘ	顯示屏幕上的信息。	–
⓭ ⊖	選擇電視或視頻輸入。	24
⓮ **0 – 9 ,-/--**	輸入數字鍵。	–
⓱ ⊛	選擇環繞聲模式： “开”（環繞聲），“模拟立体声”（模擬立體聲的單聲道音響），“关”。	–
⓳ **RESET**	使電視機恢復到工廠設定。	26

按鍵	說明	頁面
⓴ ♪	選擇聲音模式選項。 “5-Band Graphic Equalizer” 顯示將出現在屏幕上。	12
㉑	選擇圖像模式選項。	12
菜單操作		
❻ MENU	顯示或取消菜單。	17
❼	確認被選項目。	17
⓲ ↑, ↓, ←, →	選擇和調整項目。	17
定時器操作		
⓯ （喚醒定時）	依照您所要的時間設定電視以自動打開（最多 12 小時）。 一旦你已設定喚醒定時，電視機上的 指示燈將亮起黃褐色。 用喚醒定時接通電視機電源並超過一小時後，若您不按壓電視機或遙控器上的任何一個按鍵或控制鍵，則電視機再進入待機狀態。	–
⓰ （睡眠定時）	依照您所要的時間設定電視以自動關閉（最多 1 小時 30 分鐘）。	–
圖文電視操作（綠色標記） **（僅於 KV-SW34M61/SW29M61/SW25M61）**		
❹ ,	顯示之後或之前的頁數。	14
❽	顯示圖文電視。	14
⓫	顯示被隱藏的信息。	14
⓬	放大圖文電視。	14
⓭	保持圖文電視顯示。	14
⓯	顯示圖文電視服務的內容。	14
⓰	當觀看電視機節目時，等待圖文電視頁。	14
㉒ （紅色，綠色，黃色，藍色）	應用 FASTEXT 菜單。	14
立體聲或雙語言操作 **（僅於 KV-SW34M61/SW29M61/SW25M61）**		
⓬ **A/B**	選擇立體聲或雙語言模式。	13

■ 選擇圖像和聲音模式

您可選擇圖像和聲音模式並使用“个人”模式來調整您所偏好的設定。

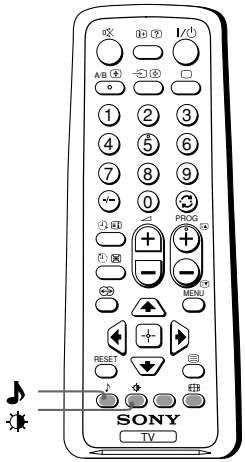

選擇圖像模式

按壓 ☼ 鍵直到您所要的圖像模式被選定。

選擇	以觀看
“动态”	對比度強的圖像。
“中间”	普通的圖像。
“柔和”	淡色的圖像。
“个人”	菜單中的“图像个人模式设定”項目所調整的最終圖像設定（參考第 18 頁）。

選擇聲音模式

按壓 ♪ 鍵（或前面控制板的 SOUND MODE 鍵）直到您所要的聲音模式被選定。

“5-Band Graphic Equalizer” 顯示將出現在屏幕上。

選擇		以收聽
“动态”		強調低音和高音的動態範圍寬而清晰的音響。
“戏剧”		強調人聲和高音調的聲音。
“柔和”		柔和、自然、放鬆的聲音。
“个人”		菜單中的“声音个人模式设定”項目所調整的最終聲音設定（參考第 20 頁）。

■ 欣賞立體聲或雙語言節目

► 僅於 KV-SW34M61/SW29M61/SW25M61

您可使用 A/B 鍵以欣賞麗音（NICAM）和 A2 立體聲制式的立體聲或雙語言節目。

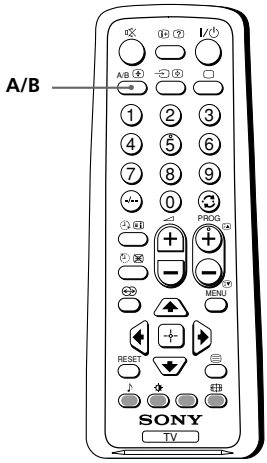

當接收麗音節目時

播送	屏幕顯示（所選擇的聲音）
麗音立體聲	丽音（立體聲） → 单声道（普通聲音）
麗音雙語言	丽音 主声道（主聲音） → 丽音 副声道（副聲音） → 单声道（普通聲音）
麗音單聲道	丽音 主声道（主聲音） → 单声道（普通聲音）

當接收 A2 節目時

播送	屏幕顯示（所選擇的聲音）
A2 立體聲	立体声（立體聲） → 单声道（普通聲音）
A2 雙語言	主声道（主聲音） → 副声道（副聲音）

註

- 當接收立體聲節目時，若有噪音則請選擇“单声道”。噪音降低，但聲音變成單聲道聲音。

■ 收看圖文電視

► 僅於 KV-SW34M61/SW29M61/SW25M61

電視台通過某些電視頻道播送信息的服務稱爲圖文電視。圖文電視可使您收到各種信息。如股票市場或新聞。

您可使用遙控器上的按鍵以收看圖文電視。

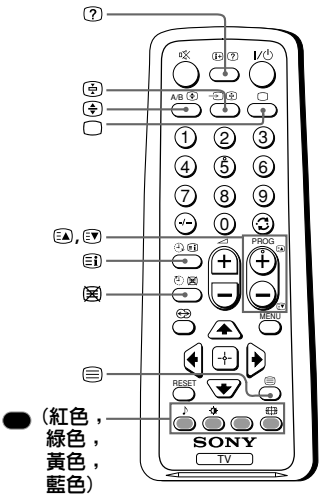

要	操作如下
將圖文電視內容附加在電視圖像上	按壓 ☰ 鍵。 每次按壓 ☰ 鍵，屏幕顯示變化如下： 圖文電視 → 圖文電視和電視圖像 → 電視圖像。 若無圖文電視廣播，“100”即顯示在屏幕左上角。
查閱圖文電視服務的內容	按壓 ⓘ 鍵。 圖文電視內容的概述和頁數即顯示在屏幕上。
選擇圖文電視頁	按壓數字鍵以輸入所要的三位數的圖文電視頁。 若您按錯了數字，請重新輸入正確的頁數。要收看下一頁或上一頁的圖文電視時，按壓 ▲ 或 ▼ 鍵。
保持（暫停）圖文電視顯示	按壓 ⊜ 鍵以在屏幕左上角顯示“⊜”的符號。 要恢復普通的圖文電視操作時，按壓 ⊜ 鍵。
顯示被隱藏的信息（如小測驗的答案）	按壓 ? 鍵。 要取消被隱藏的信息時，再次按壓此鍵。
放大圖文電視頁顯示	按壓 ⊕ 鍵。 每次按壓 ⊕ 鍵，圖文電視顯示變化如下： 放大上半部 → 放大下半部 → 正常尺寸。
等待圖文電視頁時觀看電視節目	(1) 輸入您要參閱的圖文電視頁數，然後按壓 ⊠ 鍵。 (2) 當頁數在屏幕上顯示時，按壓 ☰ 鍵以顯示文本。
選擇 FASTEXT 菜單或彩色格子	按壓與所要菜單或頁數相對應的 ●（紅色、綠色、黃色及藍色）鍵。
取消圖文電視	按壓 ▭ 鍵。

註

- FASTEXT 功能僅可在有 FASTEXT 廣播的情況下使用。

■ 介紹菜單系統

MENU（菜單）鍵能讓您顯示菜單和調整電視上的設定。以下是菜單系統的總概況。

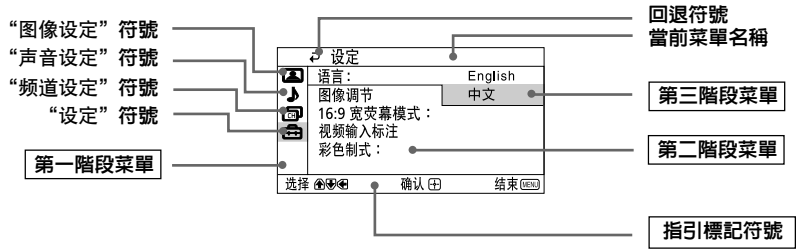

第一階段	第二階段	第三階段 / 功能	頁面
“图像设定”	“图像模式”	選擇圖像模式： “动态” → “中间” → “柔和” → “个人”	18
	“图像个人模式设定”	調整“个人”項目： “对比度” → “亮度” → “颜色” → “色调” → “锐度” → “重新设定”	
	“彩色色调设定”	調整白色色澤： “冷色调” → “自然色调” → “暖色调”	
	“智能图像降噪”	接收最理想的圖像效果： “开” → “关”	
“声音设定”	“声音模式”	選擇聲音模式： “动态” → “戏剧” → “柔和” → “个人”	19
	“声音个人模式设定”	調整“个人”項目中的聲音頻率設定： “设定” → “重新设定”	
	“平衡”	選擇以強調左右揚聲器。	
	“智能音量控制”	自動調整音量： “开” → “关”	
	“环绕声”	選擇環繞聲模式： “开” → “模拟立体声” → “关”	

續

續

第一階段	第二階段	第三階段 / 功能	頁面
“频道设定”	“自动调台”	自動預設頻道。	21
	“手动调台”	手動預設頻道。	
	“频道标注”	標註頻道號碼。	
	“童锁”	鎖定不要的頻道。	
	“频道排序”	改變顯示在屏幕上的頻道順序。	
“设定”	“语言/Language”	改變菜單語言： “English”（英文）→“中文”	23
	“图像调节”	調整圖像位置。	
	“16:9 宽荧幕模式”	改變圖像尺寸： “开”→“关”	
	“视频输入标注”	標註所連接的裝置。	
	“彩色制式”	選擇彩色制式： “自动”→“PAL”→ “SECAM”→ “NTSC3.58”→“NTSC4.43”	

如何使用菜單

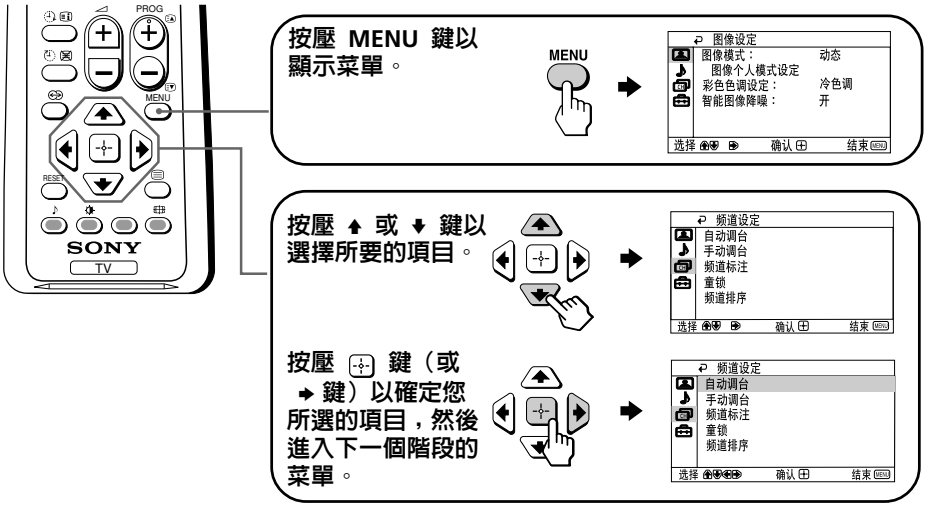

其它菜單操作

要	按壓
調整設定值	▲，▼，◀ 或 ▶ 鍵。
回到之前或進入下一個階段的菜單	◀ 或 ▶ 鍵。
取消菜單	MENU 鍵。

提示

- 要從第二階段菜單回到第一階段菜單時，請按壓 ▲ 或 ▼ 鍵直到回退符號（⮌）被選中，然後按壓 ⊕ 鍵。
- 電視機前面控制板上的 MENU 鍵，⮌ 鍵和 +/– 鍵也可用於上述操作（參考第 9 頁）。

註

- 當菜單顯示的功能呈暗淡色，您將無法選擇此功能。

■ 調整“图像设定”

“图像设定”菜單可使您調整圖像設定。

1 **按壓 MENU 鍵。**

2 **確認“图像设定”符號（）已被選擇，然後按壓 鍵。**

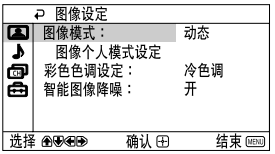

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“图像模式”），然後按壓 鍵。**

選擇	以
“图像模式”	選擇“动态”、“中间”、“柔和”或“个人”*（參考第 12 頁）。
“彩色色调设定”	調整白色色澤。 選擇“冷色调”（藍色澤）、“自然色调”（自然色澤）或“暖色调”（紅色澤）。
“智能图像降噪”	接收最理想的圖像效果。 按壓 ↑ 或 ↓ 鍵以選擇“开”，然後按壓 鍵。 要取消時，選擇“关”，然後按壓 鍵。

* 僅當“个人”模式被選取時方可隨個人喜好調整“图像个人模式设定”和“彩色色调设定”選項中的設定。

調整“个人”模式下的“图像个人模式设定”項目

1 **按壓 ↑ 或 ↓ 鍵以選擇“对比度”、“亮度”、“颜色”、“色调”（顏色深淺）或“锐度”，然後按壓 鍵。**

選擇“重新设定”將會使電視機恢復到工廠設定。

2 **按壓 ↑，↓，← 或 → 鍵以調整您所選項目的設定，然後按壓 鍵。**

3 **重復上述步驟以調整其它項目。**

當選擇“个人”項目時，您可接收已被調整的設定。

註

- 只有當彩色制式爲 NTSC 時，您才能調整“色调”設定。
- 您也可減少“锐度”以降低圖像噪音。

■ 調整“声音设定”

“声音设定”菜單可使您調整音響設定。

1 **按壓 MENU 鍵。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“声音设定”符號（♪），然後按壓 ⊕ 鍵。**

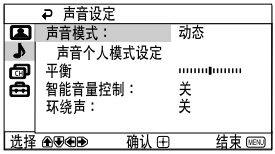

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“声音模式”），然後按壓 ⊕ 鍵。**

選擇	以
“声音模式”	選擇“动态”、“戏剧”、“柔和”或“个人”*（參考第 12 頁）。
“平衡”	按壓 ↓ 或 ← 鍵以強調左揚聲器。 按壓 ↑ 或 → 鍵以強調右揚聲器。
“智能音量控制”	自動調整所有頻道號碼和視頻輸入的音量。 按壓 ↑ 或 ↓ 鍵以選擇“开”，然後按壓 ⊕ 鍵。 要取消時，選擇“关”，然後按壓 ⊕ 鍵。
“环绕声”	選擇“开”、“模拟立体声”或“关”（參考第 10 頁）。

* 僅當“个人”模式被選取時方可隨個人喜好調整“声音个人模式设定”選項中的設定（參考第 20 頁）。

續

續

調整“个人”模式下的“声音个人模式设定”項目

“5-Band Graphic Equalizer”（5 波段互動音響均衡器）可使您在菜單上的“个人”模式調整聲音頻率設定。

1 **確認“设定”已被選定，然後按壓 ⊕ 鍵。**

選擇“重新设定”將會使電視機恢復到工廠設定。

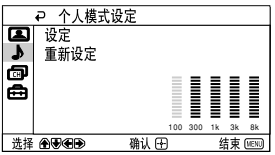

2 **按壓 ← 或 → 鍵以選擇所要的聲音頻率，然後按壓 ↑ 或 ↓ 鍵以調整設定再按壓 ⊕ 鍵。**

當選擇“个人”模式時，您可接收已被調整的設定。

註

- 調整高頻率將影響高音調聲音，調整低頻率將影響低音調聲音。
- 您可直接用電視機前面控制板的 SOUND MODE 鍵（參考第 9 頁）或按壓遙控器上的 ♪ 鍵（參考第 11 頁）以顯示設定。

■ 調整“频道设定”

“频道设定”菜單可使您自動預設頻道，手動預設頻道，標註頻道號碼，鎖定不要的頻道和改變顯示在屏幕上的頻道順序。

1 **按壓 MENU 鍵。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“频道设定”符號（CH），然後按壓 ⊕ 鍵。**

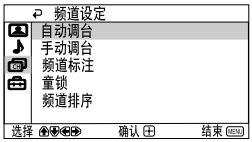

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“自动调台”），然後按壓 ⊕ 鍵。**

選擇	以
“自动调台”	自動預設頻道。
“手动调台”	手動預設所要的頻道及不能自動預設的頻道（參考第 22 頁的**手動預設頻道**）。
“频道标注”	標註頻道號碼。 (1) 選擇“频道”並按壓 ⊕ 鍵。 按壓 ↑ 或 ↓ 鍵以選擇頻道號碼，然後按壓 ⊕ 鍵。 (2) 選擇“标注”並按壓 ⊕ 鍵。按壓 ↑ 或 ↓ 鍵以選擇英文、數字、字符進行標註，然後按壓 ⊕ 鍵。
“童锁”	鎖定不要的頻道。 (1) 選擇“频道”並按壓 ⊕ 鍵。 按壓 ↑ 或 ↓ 鍵以選擇頻道號碼，然後按壓 ⊕ 鍵。 (2) 選擇“锁定设定”並按壓 ⊕ 鍵，然後按壓 ↑ 或 ↓ 鍵以選擇“开”或“关”。 若您預設一個鎖定的頻道號碼，該頻道號碼將自動解鎖。
“频道排序”	改變顯示在屏幕上的頻道順序（參考第 7 頁的“初始化设定”的 3 b）步驟）。

註

- 您可標註頻道號碼以在“频道排序”菜單裡觀看頻道標註。
- 若您排序一個鎖定的頻道，該頻道將保留在鎖定狀態。

續

續

手動預設頻道

1 **在選擇“手动调台”之後，選擇您要預設頻道的頻道號碼。**

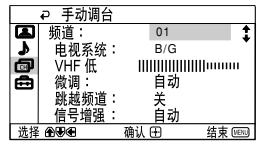

(1) 確認“频道”已被選定，然後按壓 ⊕ 鍵。

(2) 按壓 ↑ 或 ↓ 鍵直到您要預設的頻道號碼顯示在菜單上，然後按壓 ⊕ 鍵。

2 **選擇所要的頻道。**

(1) 確認“VHF 低”、“VHF 高”或“UHF”已被選定，然後按壓 ⊕ 鍵。

(2) 按壓 ↑ 或 ↓ 鍵直到您所要的頻道顯示在電視屏幕上，然後按壓 ⊕ 鍵。

3 **若所要頻道的聲音失真，則請選擇適當的電視系統。**

(1) 按壓 ↑ 或 ↓ 鍵以選擇“电视系统”，然後按壓 ⊕ 鍵。

(2) 按壓 ↑ 或 ↓ 鍵直到聲音正常爲止，然後按壓 ⊕ 鍵。

4 **若您不滿意圖像和聲音質量，您可用“微调”來改善它。**

(1) 按壓 ↑ 或 ↓ 鍵以選擇“微调”，然後按壓 ⊕ 鍵。

(2) 按壓 ↑ 或 ↓ 鍵以選擇“手动”，然後按壓 ⊕ 鍵。

(3) 按壓 ↑, ↓, ← 或 → 鍵直到圖像和聲音最佳，然後按壓 ⊕ 鍵。

菜單上的 + 或 – 符號將會在調諧時閃爍。

5 **若您在使用 PROG +/– 鍵時欲跳越此頻道號碼，您可選擇“跳越频道”功能。**

(1) 按壓 ↑ 或 ↓ 鍵以選擇“跳越频道”，然後按壓 ⊕ 鍵。

(2) 按壓 ↑ 或 ↓ 鍵以選擇“开”，然後按壓 ⊕ 鍵。

要取消時，請選擇“关”，然後按壓 ⊕ 鍵。

6 **若電視信號太強（圖像失真；圖像有線條；信號干擾）或微弱（圖像有雪花狀斑點），您可設定“信号增强”以改善圖像質量。**

(1) 按壓 ↑ 或 ↓ 鍵以選擇“信号增强”，然後按壓 ⊕ 鍵。

(2) 按壓 ↑ 或 ↓ 鍵以選擇“关”（適用於圖像失真；圖像有線條；信號干擾）或“自动”（適用於圖像有雪花狀斑點），然後按壓 ⊕ 鍵。

■ 調整“设定”菜單

“设定”菜單可使您更換菜單語言，調整圖像位置，改變圖像尺寸，標註所連接的裝置和選擇彩色制式。

1 **按壓 MENU 鍵。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“设定”符號（🧰），然後按壓 ⊕ 鍵。**

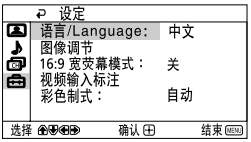

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“语言/Language”），然後按壓 ⊕ 鍵。**

選擇	以
“语言/Language”	更換菜單語言。 按壓 ↑ 或 ↓ 鍵以選擇“English”（英文）或“中文”，然後按壓 ⊕ 鍵。
“图像调节”	調整電視屏幕上傾斜的圖像。 按壓 ↑ 或 ↓ 鍵以選擇“图像旋转度调校”或“图像垂直位置调节”，然後按壓 ⊕ 鍵。 按壓 ↑，↓，← 或 → 鍵以調整圖像位置，然後按壓 ⊕ 鍵。
“16:9 宽荧幕模式”	選擇“开”或“关”（參考第 10 頁）。
“视频输入标注”	標註所連接的裝置。 (1) 選擇“视频输入”並按壓 ⊕ 鍵。 按壓 ↑ 或 ↓ 鍵以選擇您要標註的輸入，然後按壓 ⊕ 鍵。 (2) 選擇“标注”並按壓 ⊕ 鍵，然後按壓 ↑ 或 ↓ 鍵以選擇標註選項：“视频信号 1/视频信号 2/视频信号 3/DVD”、“录像机”、“卫星节目”、“游戏机”或“编辑”*。 * 您可編輯視頻輸入標註。按壓 ↑ 或 ↓ 鍵以選擇英文、數字、字符進行標註，然後按壓 ⊕ 鍵。
“彩色制式”	改變彩色制式。 按壓 ↑ 或 ↓ 鍵以選擇“自动”、“PAL”、“SECAM”、“NTSC 3.58”或“NTSC 4.43”，然後按壓 ⊕ 鍵。 通常將此設定爲“自动”。

■ 連接選購的裝置

連接至視頻輸入端子（⇨）

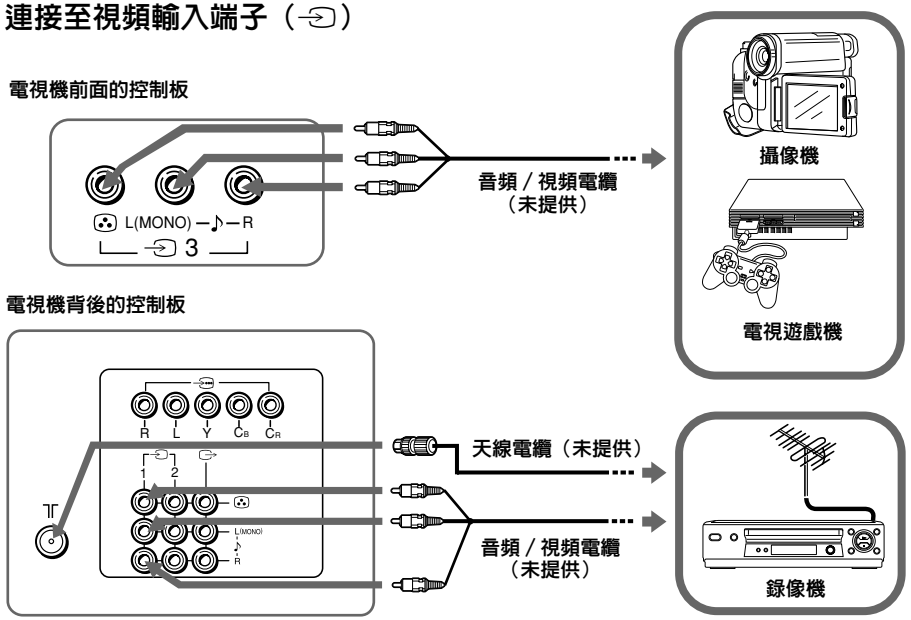

註

- 若將錄像機連接至 ⅂（天線輸入）端子，請將錄像機輸出的信號預設至電視機上的頻道號碼“0”（參考第 22 頁）。

連接至監視器輸出端子（⇨）

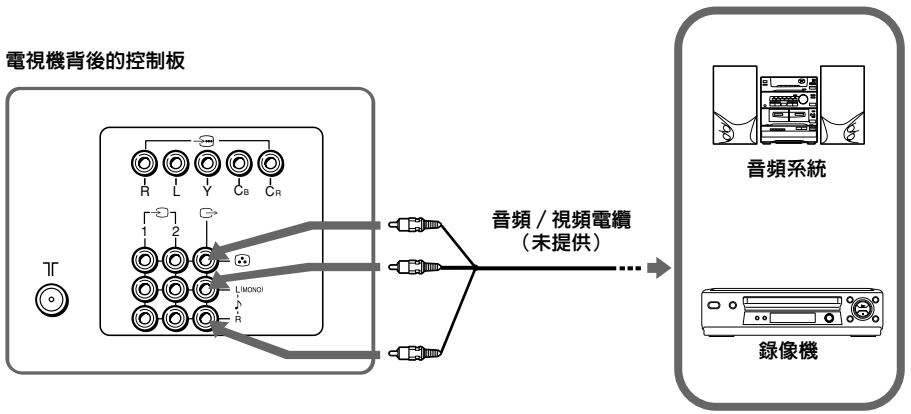

連接至 DVD 分量信號輸入端子（ ）

電視機背後的控制板

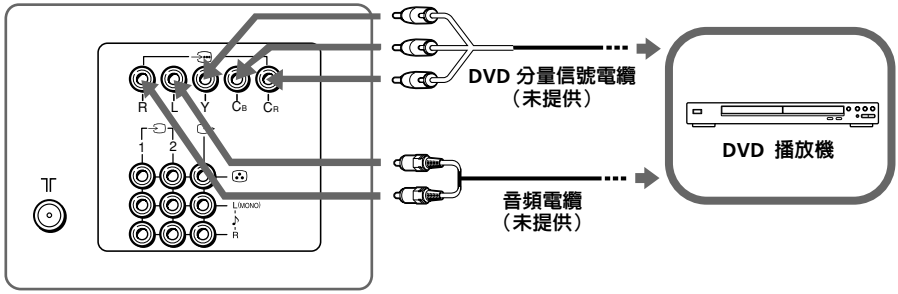

註

- 當連接 DVD 播放機至電視機上的 （分量信號輸入端子）時，若您的 DVD 播放機可輸出隔行和逐行的掃描模式信號，則請選擇隔行掃描輸出。您的電視機可接收 525i/60 赫茲或 625i/50 赫茲的隔行掃描信號。
- 某些 DVD 播放機的插口可能標記不同：

連接	至（DVD 播放機上）
Y（綠色）	Y
C_B（藍色）	C_B, P_B, C_b 或 B-Y
C_R（紅色）	C_R, P_R, C_r 或 R-Y

- 若您在電視屏幕上選擇“DVD”， （監視器輸出）將不能輸出正常的信號。這並不表示發生故障。

■ 故障檢修

若在觀看電視時遇見任何問題，您可使用重新設定功能以解決問題或參考下列故障檢修指南。若問題仍然存在，請聯絡 Sony 經銷商。

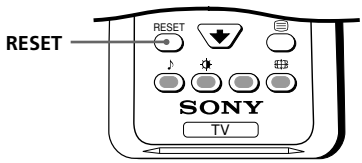

重新設定功能

按壓遙控器上的 RESET 鍵。電視屏幕即呈現空白，約數秒後，“初始化设定”菜單將會顯示在電視屏幕上。

按壓 RESET 鍵使電視機恢復到工廠設定，一些電視故障可能會消失。

故障檢修指南

癥狀	可能因素	解決方法	頁面
圖像有雪花狀斑點  **有噪聲** 	• 連接已鬆脫或電纜已損壞。	• 檢查天線電纜以及電視機，錄像機和牆上的天線連接是否正確。	24
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
	• 頻道預設不適當或不完整。	• 顯示“频道设定”菜單並選擇“手动调台”以再次預設頻道。	22
	• 傳送信號微弱。	• 顯示“频道设定”菜單，並選擇“手动调台”裡的“信号增强”爲“自动”。	22
		• 嘗試使用外部信號增強器。	–
圖像失真 **有噪聲** 	• 廣播信號太強。	• 切斷外部信號增強器的電源或拔掉其插頭以終止其操作。	–
		• 顯示“频道设定”菜單，並選擇“手动调台”裡的“信号增强”爲“关”。	22
圖像良好 **有噪聲** 	• 電視系統設定不適當。	• 請顯示“频道设定”菜單，並在“手动调台”裡選擇適當的“电视系统”。	22

癥狀	可能因素	解決方法	頁面
沒有圖像 **沒有聲音** 	• 電源線、天線或錄像機沒有被連接。	• 檢查電源線，天線和錄像機之連接是否正確。	24
	• 電視機電源沒有被接通。	• 按壓 I/⏻（電源）鍵。 • 按壓電視機上的 ⏻（主電源）鍵以切斷電視機的電源，五秒左右後再次接通電源。	10 9
圖像良好 **沒有聲音** 	• 音量水平過低。	• 按壓 + 鍵以提高音量水平。	10
	• 聲音被消除。	• 按壓 鍵以取消消音。	10
圖像有點線或條紋 	• 受周圍環境（如汽車、霓虹燈、吹風機、發電機等）影響。	• 不要在電視機旁使用吹風機或其它電器。 • 檢查天線的裝置。請尋求 Sony 經銷商的協助。	– –
圖像出現雙重影像 	• 廣播信號受周圍高山或大廈干擾。	• 使用高定向天線。 • 使用“微调”功能。	– 22
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
	• 外部信號增強器的使用不適當。	• 切斷外部信號增強器的電源或拔掉其插頭以終止其操作。	–
圖像無彩色 	• 彩色水平設定過低。	• 顯示“图像设定”菜單並選擇“图像模式”裡的“个人”，然後調整“图像个人模式设定”裡的“颜色”水平。	18
	• 彩色制式設定不適當。	• 顯示“设定”菜單及檢查“彩色制式”設定（一般將此設定爲“自动”）。	23
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–

續

續

癥狀	可能因素	解決方法	頁面
圖像傾斜 	• 受外部揚聲器或其它電器電磁性的影響，或受地球磁場方向的影響。	• 將電視機放置在離外部揚聲器或其它電器較遠的地方。 • 在“设定”菜單下顯示“图像调节”，並調整“图像旋转度调校”和“图像垂直位置调节”，以使圖像与電視屏幕對齊。	– 23
圖樣出現反常彩色斑點 	• 受外部揚聲器或其它電器電磁性的影響，或受地球磁場方向的影響。	• 將電視機放置在離外部揚聲器或其它電器較遠的地方。請別移動已被接通電源的電視機。按壓電視機上的 ①（主電源）鍵以切斷電視機的電源。約 15 分鐘後再接通電視機的電源。	–
立體聲廣播聲音開關失常或聲音失真。 **或** **聲音頻繁地轉換於單聲道和立體聲之間。** **（僅於 KV-SW34M61/SW29M61/SW25M61）。**	• 連接已鬆脫或電纜已損壞。	• 檢查天線電纜以及電視機，錄像機和牆上的天線連接是否正確。	24
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
“100”出現在螢幕頂部及沒有圖文電視顯示 **（僅於 KV-SW34M61/SW29M61/SW25M61）。**	• 頻道沒有播送圖文電視廣播。	—	14
圖文電視顯示不完全（圖像有雪花狀斑點或雙重影像） **（僅於 KV-SW34M61/SW29M61/SW25M61）。**	• 連接已鬆脫或電纜已損壞。	• 檢查天線電纜是否正常、以及電視機、錄像機和牆上的天線連接是否正確。	24
	• 天線裝置不正確。	• 調整天線方向。請向 Sony 經銷商咨詢。	–
	• 傳送信號微弱。	• 顯示“频道设定”菜單，並選擇“手动调台”裡的“信号增强”爲“自动”。 • 嘗試使用外部信號增強器。 • 使用“微调”功能。	22 – 22
電視機上的 ⏻（待機）指示燈每隔三秒閃爍至少一次的紅色亮光。	• 您的電視機的自動檢測判斷功能表明可能存在的原因。	• 計算 ⏻（待機）指示燈的亮光次數。按壓 ①（主電源）鍵以切斷電視機的電源。通知您鄰近的 Sony 維修服務中心。	–
電視屏幕有時會在更換頻道時呈顯空白，空白時間比一般略長。	• “信号增强”正在操作以探測微弱的信號。這並不表示發生故障。	—	–
電視機外殼吱嘎聲。	• 室溫的變化有時會導致電視機的外殼膨脹或縮小，因此產生噪聲。這並不表示發生故障。	—	–
當您接通電視機時，聽到“嘣”的聲音。	• 電視機自動消磁。這並不表示發生故障。	—	–

■ Specifications

	KV-SW34M61	KV-SW29M61 KV-SW29M50	KV-SW25M61 KV-SW25M50	Note
Power requirements	110-240 V AC, 50/60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I, D/K; A2 Stereo/Bilingual B/G			KV-SW34M61/ SW29M61/SW25M61 only
Teletext Language	English, French			KV-SW34M61/ SW29M61/SW25M61 only
Channel coverage				
B/G	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41			
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41			
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39			
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84			
(Antenna)	75-ohm external terminal			
Audio output (Speaker)	6 W + 6 W			
Number of terminal				
(Video)	Input: 3	Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
(Audio)	Input: 4	Output: 1	Phono jacks; 500 mVrms	
(Component Video)	Input: 1		Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms	
(Headphone)	Output: 1		Stereo minijack	
Picture tube	34 in.	29 in.	25 in.	
Tube size (cm)	86	72	64	Measured diagonally
Screen size (cm)	80	68	60	Measured diagonally
Dimensions (w/h/d, mm)	895 × 678 × 578	780 × 583 × 523	696 × 517 × 522	
Mass (kg)	75	47	36	

Design and specifications are subject to change without notice.

http://www.sony.net/

Sony Corporation